

# **Technical Instructions**

Document No. 155-783 October 25, 2017

# **OpenAir™ GSD Series**

# Non-Spring Return, 20 lb-in (2 Nm), Rotary Electronic Damper Actuators






Description	The OpenAir GSD Series direct-coupled, non-spring return rotary electronic damper actuators are 24 Vac/dc rated and available in 2-position, floating, and modulating [0(2) to 10 Vdc or 10 to 0(2) Vdc] control. The small footprint and torque make this actuator ideal for VAV boxes, small HVAC dampers, economizers, or residential zone dampers.
Features	· Pre-cabled
	Plenum rated models available
	<ul> <li>Optional built-in auxiliary switches with fixed switch points at 5° and 85° rotation</li> </ul>
	30-second run time
	<ul> <li>Signal inversion capability on modulating type</li> <li>[0(2) to 10 Vdc or 10 to 0(2) Vdc]</li> </ul>
	Small footprint for installation flexibility
	UL and cUL listed; CE certified
	<ul> <li>These devices were approved for installation in plenum areas by Underwriters Laboratories, Inc. per UL 2043.</li> </ul>
	Low voltage models are 24 Vac/dc compatible
	<ul> <li>100 to 240 Vac models available</li> </ul>
Application	Used in variable or constant air volume installations for the control of return air, mixed air, exhaust, and face and bypass, and residential zone dampers requiring up to 20 lb- in (2 Nm) torque.

Product Numbers				Table	e 1.				
		Torque	Vol	tage	Control	Signals			
	Product Number	20 lb-in (2 Nm)	24 Vac/dc	100 to 240 Vac	2-Position/ Floating	Modulating 0 (2) to 10 Vdc	Plenum Cabling	Appliance Cable	Auxiliary Switch
	GSD141.1P	~	~	_	~	_	~	—	_
	GSD146.1P	~	~		~	-	ł	—	~
	GSD341.1U	~	_	~	~		I	ł	—
	GSD346.1U	~	_	~	1			ł	~
	GSD161.1P	~	2	_	_	ł	1	_	_
	GSD166.1P	~	~	_	_	2	~	_	~

Warning/Caution	Notations	 
	WARNING:	Personal injury or loss of life may occur if you do not perform a procedure as specified.
	CAUTION:	Equipment damage may occur if you do not perform a procedure as specified.

### **Actuator Components**

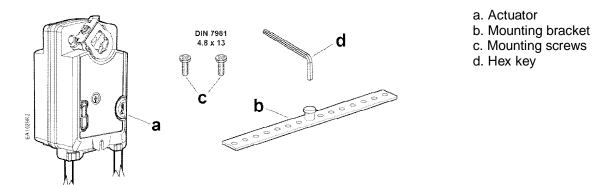

### Figure 1. Components of the GSD Non-Spring Return Actuator.

Specifications	Operating voltage				
Power Supply	(GSD1x) (GSD3x)	24 Vac/dc ± 20% 100 to 240 Vac ± 10%			
	Frequency	50/60 Hz			
	Power consumption GSD14x, 24 Vac/dc 60 Hz GSD16x; 24 Vac/dc 60 Hz GSD34x; 120 Vac 60 Hz	RunningHolding2.2 VA (1.2 W)1.0 VA (0.5 W)2.4 VA (1.4 W)1.2 VA (0.7 W)4.5 VA (1.8 W)2.4 VA (0.9 W)			
Equipment Rating	24 Vac	Class 2, in accordance with UL/CSA Class III per IEC 60536			
	120 Vac	Double insulation			
Auxiliary Switch Rating	Fixed dual end switches Switching voltage Contact rating	24 Vac to 250 Vac/12 to 30 Vdc 6A resistive/2A inductive @ AC 4A resistive/2A inductive @ 30 Vdc 0.8A resistive, 0.5A inductive @ 60 Vdc			
Control Signal	Input signal (wires 2–8) voltage input signal GSD16x input resistance	0 (2) to 10 Vdc (max. 35 Vdc) >100K ohms			
Feedback Signal	Position output signal (wires 9–2)				
	voltage output signal GSD16x maximum output current	0 (2) to 10 Vdc +1 mA, -0.5 mA			

Specifications, Co	ontinued			
Function	Running	20 lb-in (2 Nm)		
	Maximum torque	53 lb-in (6 Nm)		
	Runtime for 90°	30 seconds		
Mounting	Nominal angle of rotation	90°		
U	Maximum angular rotation	95°		
	Damper Shaft size	3/8 to 1/2-inch (8 to 13 mm) dia. 1/4 to 7/16-inch (6 to 11 mm) square		
	Minimum shaft length	3/4-inch (20 mm)		
Housing	Enclosure	IP54		
J	Material	Plenum-rated rugged plastic		
	Gear lubrication	Silicone-free		
Ambient Conditions	Ambient temperature Operating Transport Ambient humidity (non-condensing)	–25°F to 130°F (−32°C to 55°C) –25°F to 158°F (−32°C to 70°C) <95% rh		
Agency Certification		UL listed per UL60730		
	24 Vac	cUL to CSA C22.2 No. 24-93		
	<b>NOTE:</b> These devices were approved Underwriters Laboratories, Inc.	I for installation in plenum areas by c. (UL) per UL 1995.		
	120 through 240 Vac	EMC and Low Voltage Directives		
Miscellaneous	Pre-cabled connection	18 AWG (0.75 mm <sup>2</sup> )		
	Cable length	3 feet (0.9 m) length		
	Life cycle	Designed for minimum of 100,000 full stroke cycles and a minimum of 5 million repositions at rated torque and temperature		
	Dimensions in inches (millimeters)	5.46" H × 2.83" W × 2.45" D (138.8 H × 72 W × 62.5 D)		
	Weight	1.54 lbs (0.55 kg) 1.77 lbs (0.7 kg) with packaging		
Accessories	Figure 2. NEMA Type 4X	<b>ASK75.7U:</b> GSD Actuators are UL listed to meet NEMA Type 4X requirements (a degree of protection against falling dirt, rain, sleet, snow, windblown dust, splashing water, hose-directed water, corrosion, and damage from external ice formation) when installed with an ASK75.7U Weather Shield and outdoor- rated conduit fittings. This weather shield may be mounted in any orientation.		
	Weather Shield.	For dimensions, see Figure 9.		

Service Parts	5	
	<b>Figure 3. 985-055P24</b> Anti-rotation Bracket (Mounting).	<b>Figure 4. 985-124</b> 499-ohm Resistor Assembly Kit for 4 to 20 mA Applications.
Operation	operates the damper actuator. signal. A 0(2) to 10 Vdc position	o 10 Vdc signal from a controller to wire 8 (Y) The angle of rotation is proportional to the control n feedback output signal is available between wire r the position of the damper motor.
	In the event of a power failure, the control signal is lost, the ac	the actuator holds its position. In the event that only tuator returns to the ${f 0}$ position.
Overload Protec	the full range to prevent damag	e damper, the actuator is overload protected over e to the actuator.
Life Expectancy	An improperly tuned loop will ca	ause excessive repositioning that will shorten the

 Life Expectancy
 An improperly tuned loop will cause excessive repositioning that will shorten the life of the actuator.

 Sizing
 The type of actuator required depends on several factors:

1. Obtain damper torque ratings (lb-in/ft<sup>2</sup> or Nm/m<sup>2</sup>) from the damper manufacturer

- 2. Determine the area of the damper.
- 3. Calculate the total torque required to move the damper:

Total Torque = Torque Rating Damper Area

 $SF^1$ 

4. Select a non-spring return actuator using Table 1.

<sup>1</sup> Safety Factor: When calculating the total torque required, a safety factor should be included for unaccountable variables such as slight misalignments, aging of the damper, and so on. A suggested safety factor is 0.80.

Table 2.	Sizing.
----------	---------


Total Torque	Actuator
<20 lb-in (2 Nm)	GSD
<44 lb-in (<5 Nm)	GDE
<88 lb-in (<10 Nm)	GLB
<132 lb-in (<15 Nm)	GEB
<221 lb-in (<25 Nm)	GBB
<310 lb-in (<35 Nm)	GIB
>310 lb-in >620 lb-in (>35 Nm to >70 Nm)	Use tandem mounting bracket ASK73.1 with any GIB1x actuator.

**NOTE:** Mechanically coupled actuators must be of the exact same type. Use the correct mounting bracket.

Mounting and Installation	The shaft adapter can be mounted on either side of the actuator. The actuator mounting orientation and shaft length determine how they will be mounted on the actuator.
---------------------------	---

- The minimum damper drive shaft length is 3/4-inch (20 mm).
- See Specifications for the minimum and maximum damper shaft dimensions.
- A mounting bracket is included with the actuator.
- See OpenAir GSD Series, Non-Spring Return, 20 lb-In (2 Nm) Installation Instructions (129-586) for more details.

### **Auxiliary Switches**

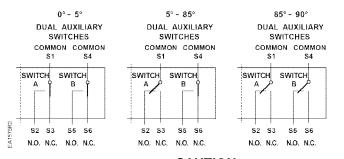

Actuator Position	Switch A Common S1 Connected to	Switch B Common S4 Connected to
0° - 5°	S3	S6
5° to 85°	S2	S6
85° - 90°	S2	S5

## CAUTION:

Mixed switch operation to the switching outputs of both dual end switches (5° and 85°) is not permitted.

Either AC line voltage from the same phase must be applied to all six outputs of the fixed dual end switches, or UL-Class 2 voltage must be applied to all six outputs.

### **DIP Switch** Functionality

NOTE: The black position indicates the active switch setting.

Description		Label		Description	Function
2 to 10 Vdc				0 to 10 Vdc	Control signal selection
					Not In Use
Inverse Acting	5		Ĉ	Direct Acting	Input signal inversion

#### Figure 5. DIP Switches.

Input Signal Inversion	Allows inverting the control input signal
) <b>I</b> C	The arrow direction indicates opening or closing (closing or opening) when operating an actuator with a given control signal.
	C = Direct acting (Factory setting) Input signal 0 Vdc ► fail-safe position
	Similar Stress Stre

Wiring All wiring must conform to NEC and local codes and regulations.

Use earth ground isolating step-down Class 2 transformers. Do not use autotransformers.

The maximum rating for a Class 2 step-down transformer is 100 VA. Determine the supply transformer rating by summing the VA ratings of all actuators and all other components used. It is recommended that one transformer power no more than 10 actuators (or 80% of its VA).



#### WARNING:

.

Installations requiring C Conformance:


- All wiring for 24 Vac/dc actuators must only be safety extra-low voltage (SELV) or protective extra-low voltage (PELV) per HD384.
- Use safety transformers per EN61558 with double isolation, designed for 100% duty-cycle for supplying SELV or PELV circuits.
  - Over-current protection for supply lines is maximum 10A.

#### Wire Designations

Each wire has the standard symbol printed on it. See Table 3.

#### Table 3. Wire Designations.

Connecting	Standard Symbol	Function	Color	Color Symbol
24 Vac/dc Actuator	1	Supply (SP)	Red	RD
	2	System Neutral	Black	BK
	6	Control signal clockwise (GSD14x.1P)	Violet	VT
	7	Control signal counterclockwise GSD14x.1P	Orange	OG
	8	Input Signal: 0 (2) to 10 Vdc (GSD16x)	Gray	GY
	9	Position Output: 0 (2) to 10 Vdc (GSD16x)	Pink	PK
100 to 240 Vac Actuators	4	Neutral	Lt Blue	LB
	6	Control signal clockwise (GSD34x.1U)	Black	BK
	7	Control signal counterclockwise (GSD34x.1U)	White	WH
Auxiliary Switches	S1	Switch A - Common	Gray/Red	GYRD
	S2	Switch A - N.O.	Gray/Blue	GYBU
	S3	Switch A - N.C.	Gray/Pink	GYPK
	S4	Switch B - Common	Black/Red	BKRD
	S5	Switch B - N.O.	Black/Blue	BKBU
	S6	Switch B - N.C.	Black/Pink	BKPK

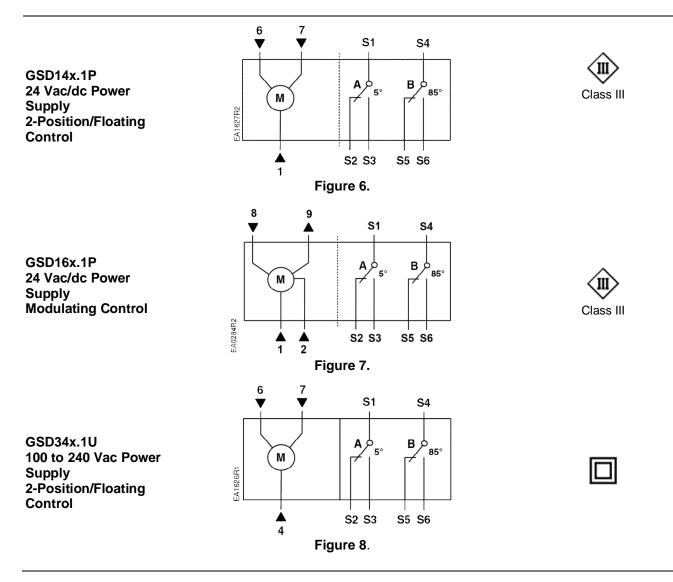

Start-Up/	1. Connect a Digital Multimeter (DMM) to the supply voltage wires.			
Commissioning	2. Verify that the supply voltage is between 19.2 and 28.8 Vac/dc.			
GSD16x	3. Turn off the power supply.			
Non-Spring Poturn	Check operation:			
Non-Spring Return Modulating Control 24 Vac/dc	1. Connect all wires per Figure 7.			
	2. Set the DMM dial to Vdc.			
	3. Connect wires 2 (black) and 8 (gray) to the DMM.			
	4. Apply a full-scale input signal (10 Vdc) to wire 8 (gray).			
	5. Allow the actuator shaft coupling to rotate from 0° to 90°.			
	6. Disconnect wire 8 (gray) and the shaft coupling returns to the <b>0</b> position.			
	Check feedback:			
	1. Set the DMM dial to Vdc.			
	2. Attach wires 2 (black) and 9 (pink) to the DMM.			
	3. Apply a full-scale input signal to wire 8 (gray). The reading at eh DMM should increase			
	<ol> <li>Remove the signal from wire 8 (gray). The reading at the DMM should decrease, and the actuator shaft coupling returns to the <b>0</b> position.</li> </ol>			
GSD14x	1. Connect a Digital Multimeter (DMM) to the supply voltage wires.			
2-Position/Floating	2. Verify that the supply voltage is between 19.2 and 28.8 Vac/dc.			
24 Vac/dc	3. Turn off the power supply.			
	Check operation:			
	1. Connect all wires per Figure 6.			
	2. Apply a control signal (24 Vac/dc) to wires 1 (red) and 6 (violet).			
	3. Allow the actuator shaft coupling to rotate from 0° to 90°.			
	4. Stop applying the control signal to wires 1 (red) and 6 (violet).			
	5. Apply a control signal (24 Vac/dc) to wires 1 (red) and 7 (orange).			
	6. Allow the actuator shaft coupling to rotate from 90° to 0°.			
SD34x	1. Connect a Digital Multimeter (DMM) to the supply voltage wires.			
nacition/	<ol> <li>Verify that the supply voltage is between 100 and 240 Vac.</li> </ol>			
-position/ loating	3. Turn off the power supply.			
00 to 240 Vac	Check Operation:			
	1. Connect all wires per Figure 8.			
	2. Apply a control signal (100 to 240 Vac) to wires 4 (light blue) and 6 (black).			
	3. Allow the actuator shaft coupling to rotate from 0° to 90°.			
	4. Stop applying the control signal to wires 4 (light blue) and 6 (black).			
	<ul><li>4. Stop applying the control signal to wires 4 (light blue) and 6 (black).</li><li>5. Apply a control signal (100 to 240 Vac) to wires 4 (light blue) and 7 (white).</li></ul>			

### Service



#### WARNING:

Do not open the actuator. If the actuator is inoperative, replace the unit.

Troubleshooting

#### WARNING:

To avoid injury or loss of life, pay attention to any hazardous voltage (for example, 120 Vac) when performing checks.

#### **Dimensions**

In Inches (Millimeters)

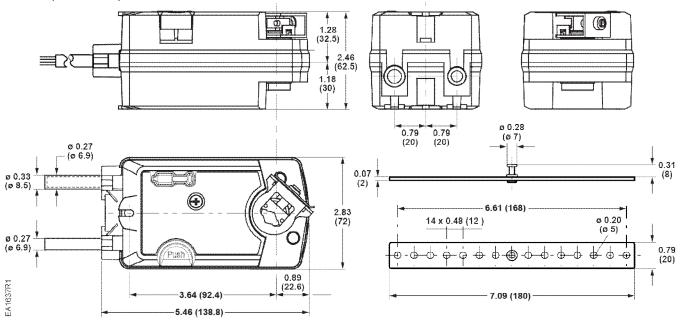


Figure 9. GSD Series Damper Actuator.

Information in this publication is based on current specifications. The company reserves the right to make changes in specifications and models as design improvements are introduced. OpenAir is a trademark of Siemens Schweiz AG. Product or company names mentioned herein may be the trademarks of their respective owners. © 2017 Siemens Industry, Inc.

Siemens Industry, Inc. Building Technologies Division 1000 Deerfield Parkway Buffalo Grove, IL 60089 + 1 847-215-1000 Your feedback is important to us. If you have comments about this document, please send them to <u>sbt\_technical.editor.us.sbt@siemens.com</u>

Document No. 155-783 Printed in the USA Page 9